




# Operation Manual



FHP Series A C Drive  
175326.00

# Safety Warnings



- This symbol  denotes an important safety tip or warning. Please read these instructions carefully before performing any of the procedures contained in this manual.
- **DO NOT INSTALL, REMOVE, OR REWIRE THIS EQUIPMENT WITH POWER APPLIED.** Have a qualified electrical technician install, adjust and service this equipment. Follow the National Electrical Code and all other applicable electrical and safety codes, including the provisions of the Occupational Safety and Health Act (OSHA), when installing equipment.
- Reduce the chance of an electrical fire, shock, or explosion by using proper grounding, over-current protection, thermal protection, and enclosure. Follow sound maintenance procedures.



It is possible for a drive to run at full speed as a result of a component failure. LEESON strongly recommends the installation of a master switch in the main power input to stop the drive in an emergency.

Circuit potentials are at 115 VAC or 230 VAC above earth ground. Avoid direct contact with the printed circuit board or with circuit elements to prevent the risk of serious injury or fatality. Use a non-metallic screwdriver for adjusting the calibration trimpots. Use approved personal protective equipment and insulated tools if working on this drive with power applied.

## General Information

The LEESON FHP Series Drives are solid state, variable-frequency AC motor drives. The FHP Series utilizes a 115 or 230 VAC, 50/60 Hz, single-phase input, and is factory calibrated for an output of 0 to 60 Hz. They will operate any 1.5 HP or smaller, 208/230-volt three-phase-AC-induction, single-phase permanent split capacitor motor (see page v) and can be user calibrated for 0 through 120 Hz output.

Although FHP Series inverters can operate over their full speed range, most motors will operate with constant torque over a 10:1 speed range, 6 Hz to 60 Hz, and constant horsepower above 60 Hz. (Inverter-duty motors may operate satisfactorily over a 20:1 speed range.) Some motors can be satisfactorily operated at speeds as low as 50 rpm (speed range 50:1). Below 50 rpm, some motors may show signs of “stepping” or “cogging”, and may run warmer.


\*Although the FHP Series will allow a minimum of 0 Hz, the actual minimum frequency is dependent on motor type and load. The motor may need to be derated for low-frequency (30 Hz and lower) operation. Please consult the motor manufacturer.

Many 3-phase inverter manufacturers claim that they can run single-phase motors effectively. This is normally accomplished by wiring only 2 phases; however, this method may cause instabilities due to the lack of feedback from one of the motor connections. Furthermore, motor torque will be reduced considerably because the phases are  $120^\circ$  apart. Although the FHP Series uses this method of connection, its fundamental design enables it to operate efficiently under these conditions.

The FHP Series features solid-state reversing with adjustable acceleration and deceleration. The FHP Series may also interface with motor thermal protection through the enable circuit.

## FHP SERIES FEATURES & BENEFITS

- **SOLID-STATE CIRCUITRY**
- **SOLID-STATE REVERSING**
- **ADJUSTABLE CARRIER FREQUENCY (4 kHz - 16 kHz)**
- **MULTIPLE MOTOR OPERATION**
- **THREE-PHASE AND SINGLE-PHASE MOTOR CONTROL**

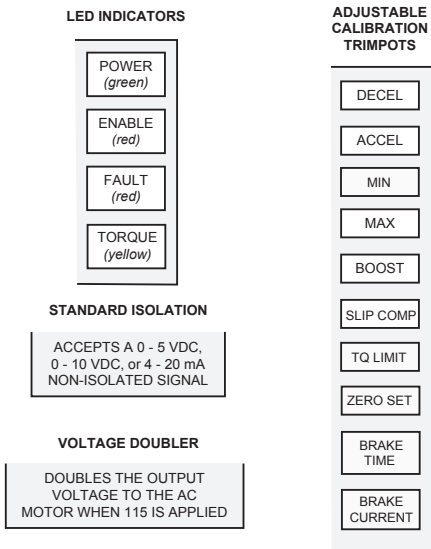

**Figure 1. FHP Series Features & Benefits**

# Important Information



## Warning

Caution should be taken when operating fan-cooled motors at low speeds because their fans may not move sufficient air to properly cool the motor. LEESON recommends “inverter-duty” motors when the speed range is beyond 10:1.

In addition to standard 3-phase induction motors, the following motor types may be used with the FHP Series:

- Permanent split capacitor (PSC)
- Shaded pole
- AC synchronous



## The following motor types **MAY NOT** be used:

- Split phase
- Capacitor start
- Repulsion induction
- Series Universal AC/DC
- Any motor with starting switch (centrifugal or relay) and/or separate starting winding.

---

# Contents

|                                                         |           |
|---------------------------------------------------------|-----------|
| <b>Safety Warnings</b>                                  | <b>i</b>  |
| <b>General Information</b>                              | <b>ii</b> |
| <b>Important Information</b>                            | <b>v</b>  |
| <b>Specifications</b>                                   | <b>1</b>  |
| <b>Dimensions</b>                                       | <b>2</b>  |
| <b>Layout</b>                                           | <b>3</b>  |
| <b>Jumper Locations</b>                                 | <b>4</b>  |
| <b>Installation</b>                                     | <b>5</b>  |
| Mounting . . . . .                                      | 6         |
| Wiring . . . . .                                        | 8         |
| Shielding guidelines . . . . .                          | 9         |
| Heat sinking . . . . .                                  | 10        |
| Fusing . . . . .                                        | 11        |
| Connections . . . . .                                   | 12        |
| Input AC Power Connections . . . . .                    | 12        |
| Motor connections . . . . .                             | 16        |
| Speed Adjust Potentiometer Connections . . . . .        | 18        |
| Signal and Optional Switch Connections . . . . .        | 19        |
| Voltage or Current Follower . . . . .                   | 20        |
| <b>Operation</b>                                        | <b>22</b> |
| Voltage Doubler . . . . .                               | 23        |
| Startup . . . . .                                       | 24        |
| To reverse motor direction: . . . . .                   | 25        |
| Starting and stopping methods . . . . .                 | 26        |
| To coast the motor to a stop . . . . .                  | 26        |
| To brake the motor to a stop . . . . .                  | 26        |
| Thermal protection of the motor . . . . .               | 27        |
| Line starting and stopping . . . . .                    | 29        |
| <b>Calibration</b>                                      | <b>31</b> |
| Calibration Procedure Setup for 60 Hz Motors: . . . . . | 33        |

|                                                             |                          |
|-------------------------------------------------------------|--------------------------|
| MAXIMUM SPEED (MAX SPD) .....                               | 33                       |
| MINIMUM SPEED (MIN SPD) .....                               | 34                       |
| TORQUE LIMIT (TQ LIMIT) .....                               | 34                       |
| ACCELERATION (ACCEL) .....                                  | 35                       |
| DECELERATION (DECEL) .....                                  | 35                       |
| BOOST .....                                                 | 36                       |
| SLIP COMPENSATION .....                                     | 37                       |
| Calibration Procedure Conclusion .....                      | 37                       |
| <b>Application Notes</b> .....                              | <b>38</b>                |
| Independent adjustable speeds with DIR switch .....         | 38                       |
| RUN/JOG switch .....                                        | 39                       |
| Single speed potentiometer control of multiple motors ..... | 40                       |
| Quick Reversing .....                                       | 41                       |
| <b>Troubleshooting</b> .....                                | <b>42</b>                |
| Before troubleshooting .....                                | 42                       |
| Diagnostic LEDs .....                                       | 44                       |
| POWER LED .....                                             | 44                       |
| ENABLE LED .....                                            | 44                       |
| FAULT LED .....                                             | 44                       |
| TQ LIMIT LED .....                                          | 45                       |
| Optional C510 Capacitor Kit (175325.00) .....               | 50                       |
| Replacement Parts .....                                     | 52                       |
| <b>Limited Warranty</b> .....                               | <b>Inside Back Cover</b> |

## Tables

|                                  |    |
|----------------------------------|----|
| Table 1. Line Fusing Chart ..... | 11 |
| Table 2. Replacement Parts ..... | 52 |



---

# Illustrations

|                                                                                |    |
|--------------------------------------------------------------------------------|----|
| Figure 1. FHP Series Features & Benefits .....                                 | iv |
| Figure 2. 175326.00 Dimensions .....                                           | 2  |
| Figure 3. 175326.00 Circuit Board Layout .....                                 | 3  |
| Figure 4. 175326.00 Jumper Locations .....                                     | 4  |
| Figure 5. AC Line Connections for 175326.00 .....                              | 13 |
| Figure 6. Voltage Doubler Feature for 175326.00 .....                          | 15 |
| Figure 7. Motor Connections-Single Phase Operation (pre-wired cap) .....       | 16 |
| Figure 8. Motor Connections -Single Phase Operation .....                      | 17 |
| Figure 9. Motor Connections -Three Phase Operation .....                       | 17 |
| Figure 10. Speed Adjust Potentiometer Connections to TB501 for 175326.00 ..... | 18 |
| Figure 11. Signal and Optional Switch Connections for 175326.00 .....          | 20 |
| Figure 12. Jumper Settings-JMP504 and JMP505 .....                             | 21 |
| Figure 13. Jumper Settings-JMP506 .....                                        | 27 |
| Figure 14. Thermal Overload Switch with Optional Enable / Disable Switch ..... | 28 |
| Figure 15. Jumper Settings--JMP503 .....                                       | 30 |
| Figure 16. Calibration Trimpot Layout .....                                    | 32 |
| Figure 17. Independent Adjustable Speeds .....                                 | 38 |
| Figure 18. RUN/JOG Switch .....                                                | 39 |
| Figure 19. Single Speed Potentiometer Control of Multiple Motors .....         | 40 |
| Figure 20. Quick Reversing .....                                               | 41 |
| Figure 21. Diagnostic LED location .....                                       | 45 |
| Figure 22. Carrier frequency capacitor location .....                          | 51 |

# Specifications

|           | 1-Phase<br>Input<br>(VAC) | 1 or 3-Phase<br>Output<br>(VAC) | Max<br>HP | Max Continuous<br>Output<br>Current (AC) | AC<br>Amps<br>In |
|-----------|---------------------------|---------------------------------|-----------|------------------------------------------|------------------|
| Drive     |                           |                                 |           |                                          |                  |
| 175326.00 | *115/230                  | 230                             | 1         | 4.0                                      | 14/7             |

\* Connect only 115 VAC line input to the 115 VAC terminals. Application of 230 VAC line input when set for 115 VAC will result in severe damage to the motor and drive, and possible explosion and injury.

† Derate current by 2% per degree if the operating temperature is above 40°C. Under no circumstances may the ambient temperature exceed 55° C.

|                                     |                                              |
|-------------------------------------|----------------------------------------------|
| AC Voltage Input Range              | 115/230 VAC $\pm$ 10%, 50/60 Hz single phase |
| Standard Carrier Frequency          | 16 KHz                                       |
| Output Frequency Range              | 0 – 120 Hz                                   |
| Maximum Output Frequency Range      | 30 – 120 Hz                                  |
| Minimum Output Frequency Range      | 0 – 30 Hz                                    |
| Acceleration Time Range             | 1 – 12 seconds                               |
| Deceleration Time Range             | 1 – 12 seconds                               |
| Analog Input Voltage Range          | 0 – 5VDC, 0-10VDC, 4-20mA**                  |
| Input Impedance, S1 to S2           | ~ 100K ohms                                  |
| Braking Current                     | 0-100% rated output                          |
| Braking Time                        | 1 – 12 seconds                               |
| Vibration                           | 0.5G max (20 – 50 Hz)<br>0.1G max (> 50 Hz)  |
| Weight                              | 1.2 lb                                       |
| Ambient Operating Temperature Range | 10° – 40° C                                  |

\*\* Isolation is standard, and allows for non-isolated speed input, enable and direction switch inputs to be used.

# Dimensions

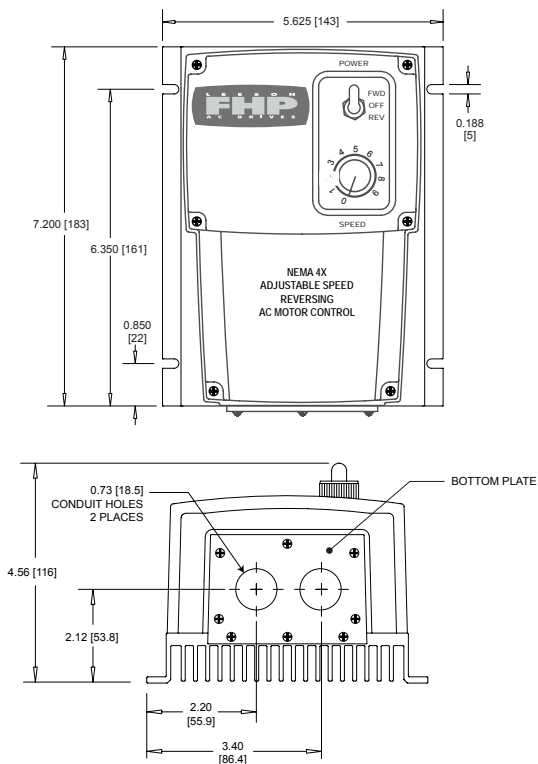


Figure 2. 175326.00 Dimensions

# Layout


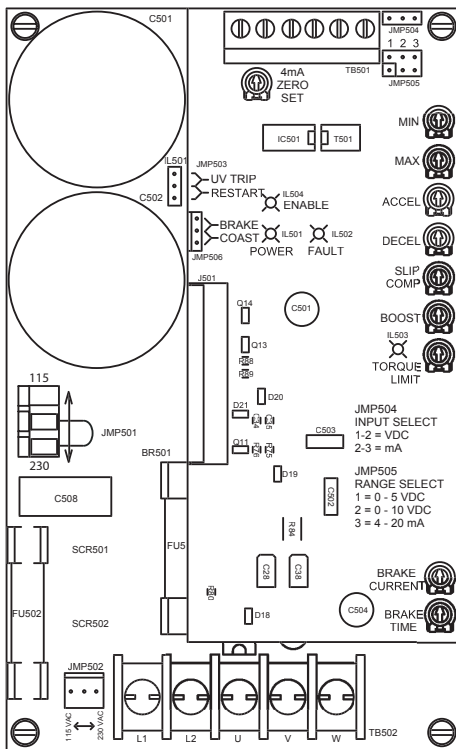


Figure 3. 175326.00 Circuit Board Layout

# Jumper Locations

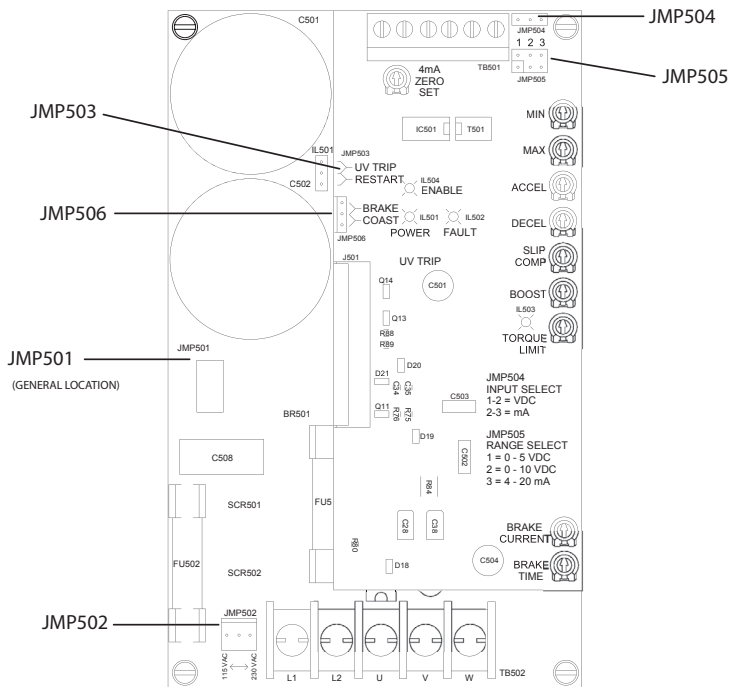

**Figure 4. 175326.00 Jumper Locations**

# Installation



## Warning



**DO NOT install, rewire, or remove this control with input power applied.** Failure to heed this warning may result in fire, explosion, or serious injury.

Circuit potentials are at 115 or 230 VAC above ground. To prevent the risk of injury or fatality, avoid direct contact with the printed circuit board or with circuit elements.

Do not disconnect any of the motor leads from the drive unless power is removed. Opening any one motor lead may damage the drive.

Wait at least one minute after power is removed from drive before working on drive.

## Mounting



### Warning

**DO NOT install, rewire, or remove this control with input power applied.** Doing so may cause fire or serious injury. Make sure that you read and understand the Safety Warnings before attempting installation.

NOTE: Horizontal mounting may require derating the drive. See your LEESON representative for more information

- It is recommended that the drive be oriented with the chassis vertical for best heat dissipation. Horizontal mounting, while acceptable, may require some thermal derating.
- Four 0.19-inch (5 mm) wide slots accept #8 pan head screws. Fasten the heatsink chassis to the subplate.
- Drive components are sensitive to electrostatic fields. Avoid direct contact with the circuit board. Hold the drive by the chassis only.

- Protect the drive from dirt, moisture, and accidental contact. Provide sufficient room for access to the terminal block and calibration trimpots.
- Mount the drive away from the heat sources. Operate the drive within the specified ambient operating temperature range.
- Prevent loose connections by avoiding excessive vibration of the drive.
- The chassis must be earth grounded. Use a star washer beneath the head of at least one of the mounting screws to penetrate the anodized chassis surface and to reach bare metal.



## Wiring



### Warning



**DO NOT install, rewire, or remove this control with input power applied.** Failure to heed this warning may result in fire, explosion, or serious injury.

Circuit potentials are at 115 or 230 VAC above ground. To prevent the risk of injury or fatality, avoid direct contact with the printed circuit board or with circuit elements.

Do not disconnect any of the motor leads from the drive unless power is removed. Opening any one motor lead may damage the drive.

Wait at least one minute after power is removed from drive before working on drive.

- Use 20 – 24 AWG wire for speed adjust potentiometer wiring. Use 14 AWG wire for AC line (L1, L2) and motor (U,V and W) wiring.

## Shielding guidelines



### Warning

**Under no circumstances should power and logic leads be bundled together.** Induced voltage can cause unpredictable behavior in any electronic device, including motor controls.

As a general rule, LEESON recommends shielding of all conductors.

If it is not practical to shield power conductors, LEESON recommends shielding all logic-level leads. If shielding the logic leads is not practical, the user should twist all logic leads with themselves to minimize induced noise.

It may be necessary to earth ground the shielded cable. If noise is produced by devices other than the drive, ground the shield at the drive end. If noise is generated by a device on the drive, ground the shield at the end away from the drive. Do not ground both ends of the shield.

If the drive continues to pick up noise after grounding the shield, it may be necessary to add AC line filtering devices, or to mount the drive in a less noisy environment.

Logic wires from other input devices, such as motion controllers and PLL velocity controllers, must be separated from power lines in the same manner as the logic I/O on this drive.

## **Heat sinking**

The 175326.00 drive is delivered with a heat sink chassis. Ensure that there is adequate space above and below the drive for proper convection air flow. A small fan may be necessary for proper cooling in restricted space applications.

---

## Fusing

FHP series drives include AC power line fuses on the main PC Board. Use fast-acting fuses rated for 250 VAC or higher. See Table 1 for recommended line fuse sizes.

Table 1. Line Fusing Chart

---

| Drive     | 1-Phase<br>Input<br>(VAC) | Max<br>HP | AC<br>Amps<br>In | AC Line<br>Fuse<br>Size (Amps) |
|-----------|---------------------------|-----------|------------------|--------------------------------|
| 175326.00 | 115/230                   | 1         | 14/7             | 15                             |

---

## Connections

All power input and power output connections are made to TB502.




### Warning

**DO NOT connect this equipment with power applied.** Failure to heed this directive may result in fire or serious injury.

LEESON strongly recommends the installation of a master power switch in the voltage input line. The switch contacts should be rated at a minimum of 200% of motor nameplate current and 250 volts.

## Input AC Power connections

Connect the AC power input to TB502 L1 and L2 as shown in Figure 5 (page 13). Connect an external master stop switch. Install the switch between the external AC power input as shown.

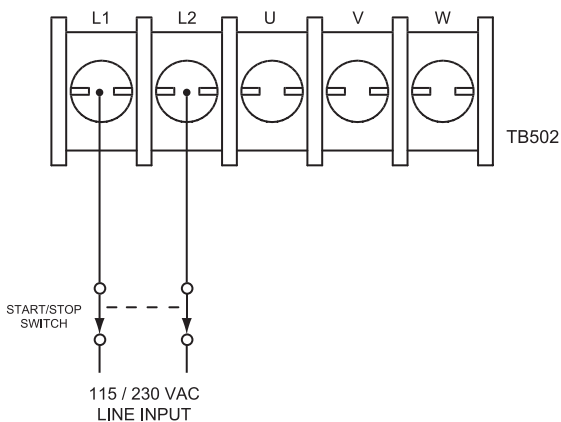

**Figure 5. AC Line Connections for 175326.00**

**Warning**

**Do not connect 230 VAC line input when the drive is set for 115 VAC input.**

This will result in severe damage to the motor. and can lead to explosion and/or injury.



Connect AC Power input to L1 and L2 as shown in Figures 5 (page 13), depending on the model of drive being used.

**NOTE:** The 175326.00 drive is equipped with a voltage-doubler feature, which converts a 115 VAC input to a 230 VAC output, for use with 230V motors. The drive output current rating remains the same for either AC input voltage. Use caution when connecting this output.

If the input voltage is 115 VAC and the desired output voltage is 230 VAC (voltage doubler mode), set jumpers as shown in Figure 6 (page 15).

If the input voltage is 230 VAC and the desired output voltage is 230 VAC (no voltage doubler), set jumpers as show in Figure 6 (page 15).

Refer to Figure 4 (page 4) for jumper locations.

**NOTE:** The FHP series of drives covered in this manual are meant to be used with 208/230 VAC motors only. DO NOT use this series of drives with 115 VAC motors.

### JMP502



Jumper Pins 1 & 2 for 115 VAC input

Jumper Pins 2 & 3 for 230 VAC input



### JMP501



115 VAC



Jumper Pins 2 & 3 for 115 VAC input

Jumper Pins 1 & 2 for 230 VAC input

**Figure 6. Voltage Doubler Feature for 175326.00**




## Motor connections

Motor connections are made to TB502


### Single-phase operation

For single-phase operation, connect the motor as shown below in Figure 7. Ensure that the prewired capacitor and its associated motor coil are connected to terminals U and V as shown. This connection may be internal if using a 2-wire motor. If the motor has three leads, you must make this connection yourself.

To reverse a single phase permanent split capacitor motor, connect the motor as shown in Figure 8 (page 17). The motor cap must be removed from the circuit.

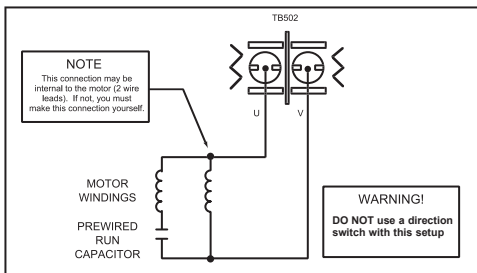


**Figure 7. Single Phase Operation (pre-wired cap)**

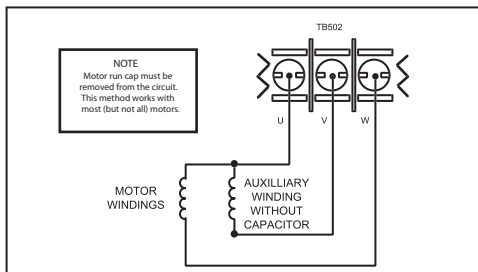

**Figure 8. Single Phase Operation (Reversing)**

## Three-phase operation

Connect a three-phase motor to terminals U, V and W as shown in Figure 9 below.

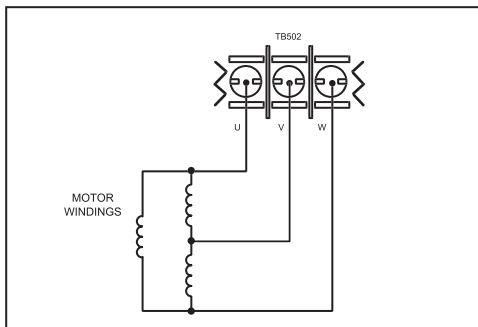


**Figure 9. Three-phase Operation**

## Speed Adjust Potentiometer Connections

Set JMP504 for VDC input by jumpering pins 1 & 2. Set JMP505 for 0-5VDC by jumpering pin column 1. Refer to Figure 4 (page 4) for Jumper Locations. Connect a speed adjust potentiometer to terminals S1, S2 and S3. Make sure the potentiometer is connected so that the motor speed will increase as the potentiometer is turned clockwise. See Figure 10 below.

NOTE: These settings and connections are factory installed on the 175326.00 drive.

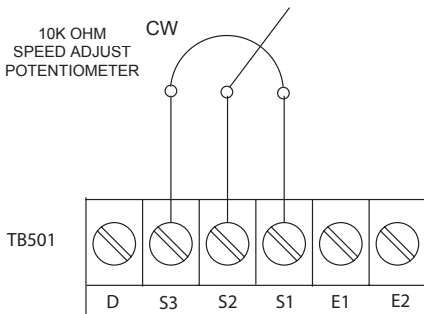

**Figure 10. Speed Adjust Potentiometer Connections to TB501 for 175326.00**

---

## Signal and Optional Switch Connections

All signal and switch connections are made at TB501. Use 20 - 24 AWG wire for speed adjust potentiometer and switch connections.

NOTE: The Enable/Disable and Direction switch are factory installed on the FHP Series drive.


### ENABLE/DISABLE switch

Connect a single-pole, single-throw ENABLE/DISABLE switch between the ENABLE (E2) and COMMON (E1) terminals as shown. Open the switch to disable the drive and coast or brake to a stop. Refer to (page 26) for stopping method. Close the switch to accelerate to set speed at a rate controlled by the ACCEL trimpot.

### DIRECTION (D) switch

Connect a single-pole, single-throw DIRECTION switch between the (D) and COMMON (E1) terminals as shown in Figure 11 (page 20). Opening the switch will cause the motor to rotate in the forward direction; closing the switch will reverse motor rotation.

The drive will decelerate the motor to a stop, (at the DECEL trimpot setting), before reversing, so there is no need to wait for the motor to coast or brake to a stop before changing direction. For faster reversing see Application Notes (page 38).

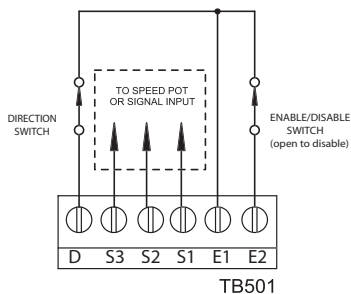

**Figure 11. Signal and Optional Switch Connections  
for 175326.00**

## Voltage or Current Follower

Drives can be configured to follow an isolated or a grounded (non-isolated) voltage or current signal. To configure the drive to follow a voltage or current signal, connect the signal leads to the S1 and S2 terminals on TB501 as shown in Figure 11 above. Ensure that the following jumper terminals are properly set as shown in Figure 12 (page 21).

## JMP504 Input Type

Jumper pins 1 & 2 for Voltage follower or speed pot mode.

Jumper pins 2 & 3 for Current follower.

## JMP505 Input Range Settings


Set jumper in position 1 for 0-5 VDC signal or speed pot input.

Set jumper in position 2 for 0-10 VDC signal.


Set jumper in position 3 for 4-20 mA signal. \*

\* The 4-20 mA ZERO SET potentiometer should be used to calibrate the zero (or minimum) speed of the drive with 4mA applied to the input. For voltage inputs this pot should be set to full CCW.

### JMP504



### JMP505



**Figure 12. Jumper Settings--JMP504 and JMP505**

# Operation



## Warning



**Dangerous voltages exist on the drive when it is powered, and up to 60 seconds after power is removed and the motor stops. BE ALERT.** High voltages can cause serious or fatal injury.

Do not change jumper settings with power applied. Ensure that jumper settings are compatible with the motor being controlled.



## Voltage Input Warning



**DO NOT connect 230 VAC line input when the drive is set for 115 VAC input.** This will result in severe damage to the motor and drive, and possible explosion and/or injury.

## Voltage Doubler



### Warning

**DO NOT connect 230 VAC line input when drive is set for 115 VAC input.** This will result in severe damage to the motor and drive, and possible explosion or severe injury.

The 175326.00 series drives are equipped with a unique voltage-doubling feature, for use when 230 VAC input voltage is not available. This feature converts a 115 VAC input to a 230 VAC output, for use with 230V motors. The drive output current rating remains the same for either AC input voltage.

Refer to Figure 6 (page 15) for connection information. Use extreme caution when connecting this feature. Incorrect use of this feature may result in fire and/or serious injury.

**NOTE:** The 175326.00 is meant to be used with 208/230 VAC motors only. **DO NOT** use this series of drives with 115 VAC motors.



## Startup



### Warning

**DO NOT change jumper settings with power applied.** Ensure that jumper settings are compatible with the motor being controlled.

Before applying power, verify that no conductive material is present on the printed circuit board.

1. Verify that no conductive material is present on the PCB.
2. Verify that the correct voltage is connected to the inputs before applying power. **DO NOT CONNECT 230 VAC** line voltage to a 115 VAC configured drive. Applying power in this manner will damage the motor and drive.
3. Set the speed adjust potentiometer or reference signal to zero (full CCW).
4. Set the DIRECTION switch (if installed) to the desired direction. If no switch is installed, add or remove a jumper across the (D) and (E1) terminals, as required.
5. Apply 115 or 230 VAC, 50/60 Hz, single-phase power to the drive. The green POWER LED will come on after an initial delay of 1 - 2 seconds. If the POWER LED does not light, check the line fuses to ensure that they are properly installed and not open.

7. If you attempt to startup and the yellow TQ LED comes on, the control has entered torque limit mode. To avoid this occurrence, you may:
  - a. increase the torque limit setting\*, or
  - b. lengthen the acceleration time enough to accommodate the starting torque needed by adjusting the ACCEL trimpot.

\* Do not set the torque limit setting above 150% of the motor's nameplate current rating.

## **To reverse motor direction:**

To reverse the direction of motor shaft rotation while the motor is running, set the DIRECTION switch to the opposite position. If no DIRECTION switch is installed, open or short the (DIR) and (E1) terminals on TB501, as required.

When a new direction is selected, there is no need to open the enable input. The control will automatically decelerate the motor to zero speed, reverse direction, and then accelerate the motor back to the set speed. Acceleration and deceleration rates are controlled by the ACCEL/DECEL trimpot settings. If quicker reversing is needed refer to applications notes section (page 38) for further detail.

**NOTE:** DO NOT use the DIRECTION switch if there is a capacitor in the motor windings.

## **Starting and stopping methods**

(factory set to COAST position)

### **To coast the motor to a stop**

Insure that JMP506 is set to the COAST position as shown in Figure 13 (page 27). Refer to Figure 4 (page 4) for Jumper Locations. To coast the motor to a stop open the ENABLE/DISABLE switch, or remove the jumper between ENABLE (E2) and COMMON (E1) terminals of TB501. Refer to (page 19) for instructions on switch installation.

### **To brake the motor to a stop**

Insure that JMP506 is set to the BRAKE position as shown in Figure 13 (page 27). Refer to Figure 4 (page 4) for Jumper Locations. Confirm BRAKE CURRENT and BRAKE TIME potentiometers are calibrated to a desired value. BREAK CURRENT is adjustable from 0-100% of rated output current. BRAKE TIME is adjustable from 1 -12 seconds. To brake the motor,




**Figure 13. 175326.00 Jumper Settings--JMP506**

## **Thermal protection of the motor**

The enable input can also act as a motor thermal protection circuit for motors having a built-in thermal protector. These thermal protectors are operated only by motor heat and open the enable circuit when the motor reaches a temperature capable of causing damage to the motor winding.

Normally, these thermal procedures automatically close the circuit when the motor has cooled to a safe temperature. In operation, the drive can be disabled by opening the enable switch or opening the thermal overload switch. See Figure 14 below.

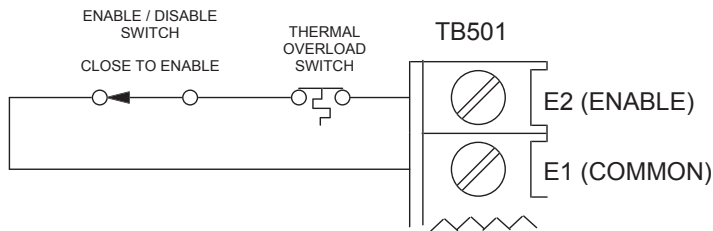

**Figure 14. Thermal Overload Switch with Optional Enable / Disable Switch**

## Line starting and line stopping




### Warning

**LEESON strongly recommends the installation of a master power switch in the voltage input line (see Power and Fuse connections, page 11).** The switch contacts should be rated at a minimum of 200% of motor nameplate current and 250 volts.

Line starting/line stopping (applying and removing AC voltage input) may be configured to operate two different ways by use of JMP503.

When JMP503 is set to the UV TRIP position as shown in Figure 15 (page 30), the drive will stop and latch off when an under voltage condition, (bus voltage drops below 200VDC), occurs. This can occur due to line sag, line transients, or line disconnect. The drive may then be restarted by cycling the ENABLE off then on, or waiting until the DC bus drops to zero, (approximately 1 minute), at which point the drive will restart upon reapplication of line power. Refer to Figure 4 (page 4) for Jumper Locations.

When JMP503 is set to the RESTART position as shown in Figure 15 below (factory set to UV trip), the drive will stop when an under voltage condition, (bus voltage drops below 200 VDC), occurs. This can occur due to line sag, line transients, or line disconnect. A timer, (1.5 seconds), is started which allows an automatic restart if the bus voltage has returned to proper operation potential. Refer to Figure 4 (page 4) for Jumper Locations.

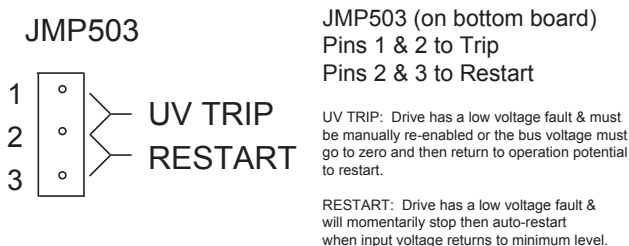

**Figure 15. Jumper Settings--JMP503**

# Calibration



## Warning




**Dangerous voltages exist on the drive when it is powered, and up to 60 seconds after power is removed and the motor stops.** When possible, disconnect the voltage input from the drive before adjusting the trimpots. If the trimpots must be adjusted with power applied, use insulated tools and the appropriate personal protection equipment. **BE ALERT.** High voltages can cause serious or fatal injury.

The 175326.00 has ten user-adjustable trimpots. Each drive is factory calibrated to its maximum horsepower rating. Re-adjust the calibration trimpot settings to accommodate lower horsepower motors. See Figure 16 (page 32) for trimpot locations.

All adjustments increase with clockwise (CW) rotation and decrease with counter-clockwise (CCW) rotation. Use a non-metallic screwdriver for calibration. Each trimpot is identified on the printed circuit board.



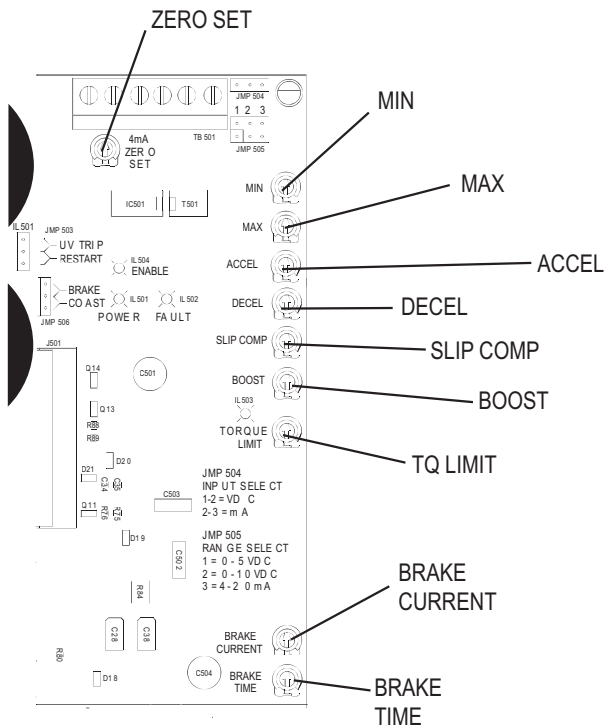

**Figure 16. 175326.00 Calibration Trimpot Locations**

---

## Calibration Procedure Setup for 60 Hz Motors:

1. Set JMP501 & JMP502\*\* to appropriate input voltage setting (115/230VAC). Refer to Figure 4 (page 4) for Jumper Locations.
2. Set the ENABLE switch to the DISABLE (open) position. If no switch is installed, remove the jumper between the (E2) and (E1) terminals of TB501.
3. Set the DIRECTION switch to the FWD (open) position. If no switch is installed, confirm that there is no jumper between the (D) and (E1) terminals of TB501.
4. Set all trimpots except TQ LIMIT and MAX fully counterclockwise (CCW).
5. Set the TQ LIMIT trimpot to maximum (full CW).
6. Set the MAX trimpot to the 50% position.
7. Set the speed adjust potentiometer or reference signal to zero (full CCW):
8. Calibrate the trimmer pots as follows:

### MAXIMUM SPEED (MAX SPD)

Rotate the speed adjust potentiometer full CW or set the reference signal to MAX. Using a hand-held tachometer or analog frequency meter as a reference, adjust the MAX trimpot until the desired maximum speed or frequency is reached.

## MINIMUM SPEED (MIN)

Rotate the speed adjust potentiometer CCW or set the signal reference to a minimum. Adjust the MIN trimpot until the motor has stopped (for zero speed setting), or until desired minimum speed has been reached.

## TORQUE LIMIT (TQ LIMIT)



### Warning

**Although the TORQUE LIMIT trimpot can be set up to 150% of the drive nameplate rating, continuous operation beyond the drive nameplate rating may cause damage to the motor and/or drive.**

1. With no power applied to the drive, connect a (true RMS) ammeter in series with one of the motor leads.
2. Set the TQ LIMIT trimpot to full CCW.
3. Carefully lock the motor shaft. Ensure that the motor is firmly mounted.
4. Apply line power. The motor should be stopped.
5. Set the speed adjust potentiometer or reference signal to maximum speed. The motor should remain stopped.
6. Slowly rotate the TQ LIMIT trimpot clockwise (CW) until the ammeter reads 120% of maximum motor current.

7. Set the speed adjust potentiometer or reference signal to zero speed.
8. Remove power from the drive.
9. Remove the lock from the motor shaft.
10. Remove the ammeter in series with the motor lead.

## **ACCELERATION (ACCEL)**

1. Set the speed adjust potentiometer or reference signal to zero and wait for the motor to come to a stop (or minimum speed).
2. Set the speed adjust potentiometer or reference signal to maximum speed (full CW) and note the time the motor takes to accelerate to maximum speed.
3. If the acceleration time differs from the desired time, adjust the ACCEL trimpot until the desired time is reached. Rotating the ACCEL trimpot CW increases the acceleration time.

## **DECELERATION (DECEL)**

1. Set the speed adjust potentiometer or reference signal to maximum (full CW) and wait for the motor to reach maximum speed.

2. Set the speed adjust potentiometer or reference signal to minimum speed (full CCW) and note the time the motor takes to decelerate to minimum speed.
3. If the deceleration time differs from the desired time, adjust the DECEL trimpot until the desired time is reached. Rotating the DECEL pot CW increases the deceleration time.

## BOOST

The BOOST trimpot is used to increase motor torque at low speeds. The minimum setting is sufficient for most applications and does not need to be adjusted. If the motor stalls or runs erratically at very low speeds (below 10 Hz), the boost trimpot may need adjustment.

1. Run the motor at the lowest continuous frequency/speed required.
2. Monitor the motor phase current (with a true RMS meter) while very slowly turning the BOOST trimpot CW until the motor operates properly, or 100% of the motor nameplate current is reached.

**NOTE:** Use the absolute minimum amount of BOOST necessary to achieve proper motor operation. Improper use of the BOOST feature may cause motor and/or drive overheating and failure. If proper motion operation cannot be achieved with the above

---

## SLIP COMPENSATION (SLIP COMP)

Slip compensation is used to minimize the normal speed changes occurring in an induction motor from no load to full load conditions.

1. Using the speed adjust potentiometer or reference signal, run the motor at the desired RPM under a no load condition. Measure the RPM with a tachometer.
2. Without changing the speed adjust potentiometer or reference signal, apply a full load to the motor, and bring the motor speed back up using the SLIP COMP pot to the originally measured RPM.
3. These procedures, (1&2), may need to be repeated several times to reach the desired accuracy required.\*\*

\*\*Wide speed range accuracy of the slip compensation method depends heavily on motor slip vs. frequency characteristics.


## Calibration Procedure Conclusion

1. Set the speed adjust potentiometer or reference signal to zero (full CCW).
2. Disable the drive by opening the ENABLE/DISABLE switch or removing the jumper from TB501 (E2) and (E1) terminals.
3. Remove power to the drive and motor. Calibration is now complete.

# Application Notes

## Independent adjustable speeds with DIR switch

Replace the speed adjust potentiometer with two single-pole multi-position switches, and two or more potentiometers in parallel, with a total parallel resistance of 10K ohms. Figure 17 below shows the connection of two independent speed adjust potentiometers that can be mounted at two separate operating stations.

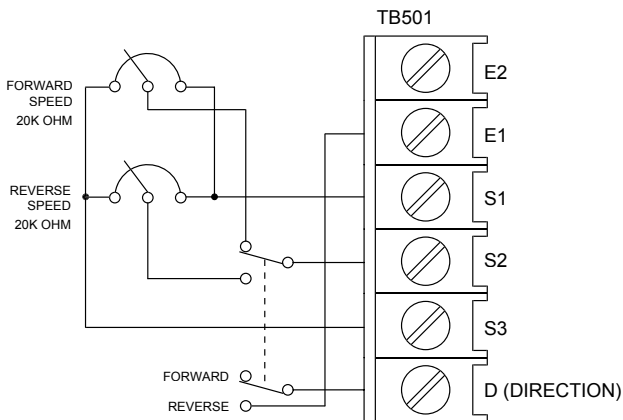


**Figure 17. Independent Adjustable Speeds**

## RUN/JOG switch

Using a RUN/JOG switch is recommended in applications where quick stopping is not needed and frequent jogging is required. Use a single-pole, two-position switch for the RUN/JOG switch, and a single-pole, normally open, momentary operated pushbutton for the JOG pushbutton.

Connect the RUN/JOG switch and JOG pushbutton to terminal board TB501 as shown in Figure 18 below. The motor stops when the RUN/JOG switch is set to JOG. Press the JOG pushbutton to jog the motor. Return the RUN/JOG switch to RUN for normal operation.

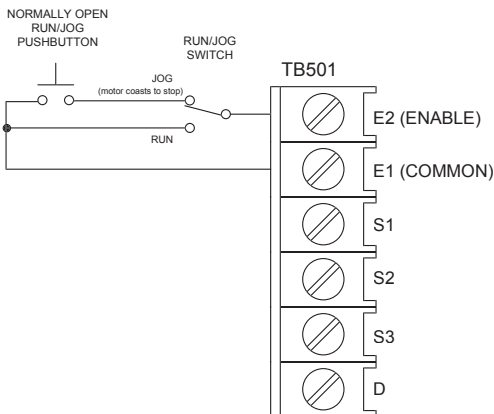

**Figure 18. RUN/JOG Switch**




## Single speed potentiometer control of multiple motors



### Warning

The combined current draw of all motors must not exceed the current rating of the drive.


The 175326.00 is capable of operating up to eight 3-phase motors simultaneously. All motors must be of the same type and must control similar loads. Connect each motor as shown in Figure 19 below.

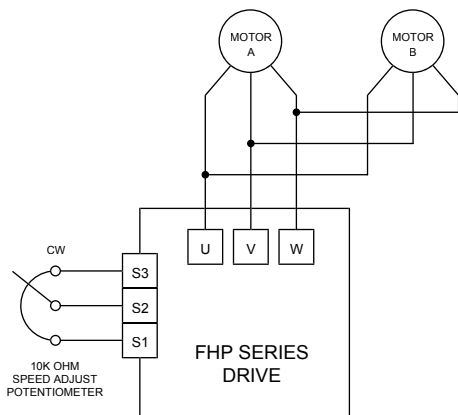

**Figure 19. Single Speed Potentiometer Control of Multiple Motors**

## Quick Reversing

To reverse the direction of motor shaft rotation, install a DPDT center off switch as shown in Figure 20 below. The drive will stop the motor before reversing, so there is no need to wait for the motor to coast to a stop before changing direction. JMP506 must be set to brake. Refer to Figure 4 (page 4) for Jumper Locations.

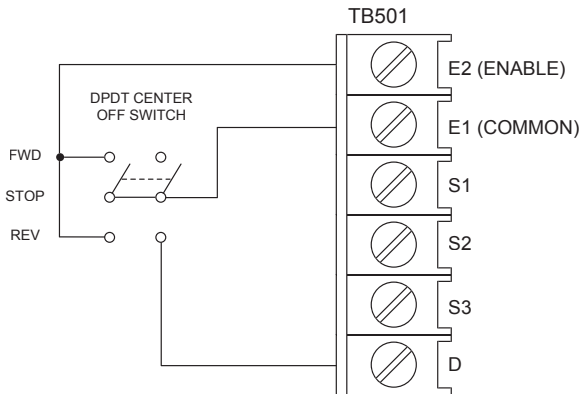

**Figure 20. FHP Series Quick Reversing**

# Troubleshooting



## Warning



**Dangerous voltages exist on the drive when it is powered, and up to 60 seconds after power is removed and the motor stops.** When possible, disconnect the voltage input from the drive while troubleshooting. **BE ALERT.** High voltages can cause serious or fatal injury.

## Before troubleshooting

Perform the following steps before starting any procedure in this section:

- Disconnect AC voltage input from the drive. Wait 60 seconds for power to discharge. The green POWER LED will blink while power is discharging.
- Check the drive closely for damaged components.
- Check that no wire, chips, or other foreign material has become lodged on the printed circuit board.
- Verify that every connection is correct and in good condition.

- Verify that there are no short circuits or grounded connections.
- Check that the drive's rated phase current and RMS voltage are consistent with the motor ratings.

For additional assistance, contact your local LEESON distributor, or the factory direct by telephone at:

(Phone) 262-377-8810 or (Fax) 262-377-9025

## Diagnostic LEDs

The 175326.00 is equipped with diagnostic LED's to assist the user in troubleshooting and monitoring equipment status while in use. Refer to Figure 21 (page 45) for diagnostic LED locations.

### POWER LED

The green POWER LED is on when AC line voltage is applied and the control's low-voltage power supply is operational.

### ENABLE LED

The red ENABLE LED turns on whenever the inverter output is enabled.

### FAULT LED


The red FAULT LED blinks on and off when the drive output is locked out or not ENABLED and any one of the following fault conditions occur:

1. Overvoltage
  - FHP Series 230AC controls: DC bus exceeds 400 VDC
2. Undervoltage
  - FHP Series 230AC controls: DC bus drops below 200 VDC
3. Instantaneous Overcurrent Trip - Inverter output current has exceeded safe levels (250%).

**Note:** The FAULT condition must be reset using the ENABLE function of the FHP (opening and closing the ENABLE input).

## TORQUE (TQ) LIMIT LED

The yellow TQ LIMIT LED is on when the drive output current exceeds the threshold set by the TQ LIMIT trimpot. When the TQ LIMIT LED turns on, shut down the motor and drive by disabling or removing power. Check the motor to make sure it is not jammed or overloaded. The TQ LIMIT trimpot may need to be recalibrated. See the Calibration section (page 34) for information on calibrating the TQ LIMIT trimpot.

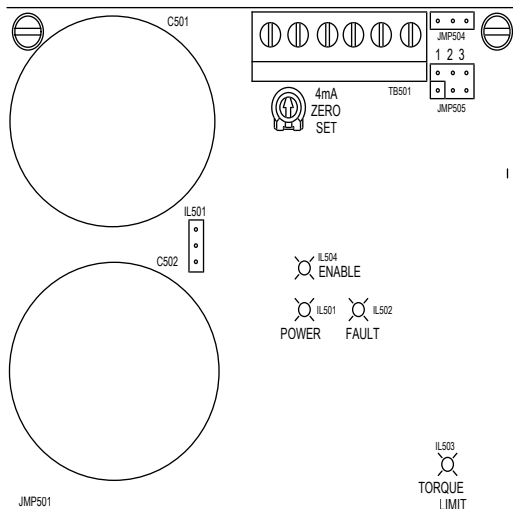

**Figure 21. 175326.00 LED locations**

| Problem                                                      | Possible Cause                                                                                                                                                                                                                                                   | Suggested Solution                                                                                                                                                                                                                                                       |
|--------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Internal line fuse blows                                     | <ol style="list-style-type: none"> <li>1. Line fuses are the wrong size.</li> <li>2. Motor or motor cable is shorted to ground.</li> <li>3. Nuisance tripping caused by a combination of ambient conditions and high-current spikes (i.e. reversing).</li> </ol> | <ol style="list-style-type: none"> <li>1. Check that line fuses are properly sized for the motor being used.</li> <li>2. Check motor cable and motor for shorts.</li> <li>3. Add a blower to cool the drive components; increase TQ LIMIT settings (page 34).</li> </ol> |
| Internal line fuse does not blow, but the motor does not run | <ol style="list-style-type: none"> <li>1. Speed adjust potentiometer or voltage input signal is set to zero speed.</li> <li>2. Speed adjust potentiometer or voltage input signal is not properly connected to drive input; connections are open.</li> </ol>     | <ol style="list-style-type: none"> <li>1. Increase the speed adjust potentiometer setting or voltage input signal.</li> <li>2. Check connections to input. Verify that connections are not open.</li> </ol>                                                              |

| Problem                                                              | Possible Cause                                                                                                                                                                                                                                                                      | Suggested Solution                                                                                                                                                                                                                                                                                                                                                               |
|----------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Internal line fuse does not blow, but the motor does not run (cont.) | <ol style="list-style-type: none"> <li>3. Drive is "tripped" off or has gone into thermal overload.</li> <li>4. Drive has been disabled.</li> <li>5. Drive is in current limit.</li> <li>6. Drive is not receiving AC voltage input.</li> <li>7. Motor is not connected.</li> </ol> | <ol style="list-style-type: none"> <li>3. Disable, then re-enable the drive.</li> <li>4. Ensure that ENABLE (EN) and COM terminals are properly connected.</li> <li>5. Verify that motor is not jammed. Increase TQLIM setting if it is set too low (page 34).</li> <li>6. Apply AC line voltage to L1 and L2.</li> <li>7. Connect motor to drive outputs U, V and W.</li> </ol> |
| Motor runs too slow or too fast at set speed                         | <ol style="list-style-type: none"> <li>1. MAX SPD trimpot is not calibrated correctly.</li> </ol>                                                                                                                                                                                   | <ol style="list-style-type: none"> <li>1. Calibrate MAX SPD trimpot (page 33).</li> </ol>                                                                                                                                                                                                                                                                                        |



| Problem                                | Possible Cause                                                                                                                                                                                    | Suggested Solution                                                                                                                                                                                                                                            |
|----------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Motor will not reach the desired speed | <ol style="list-style-type: none"> <li>1. MAX SPD setting is too low.</li> <li>2. Nominal input voltage may be too low for motor</li> <li>3. Motor is overloaded.</li> </ol>                      | <ol style="list-style-type: none"> <li>1. Increase MAX SPD setting (page 33).</li> <li>2. Compare motor voltage to input voltage; replace motor if necessary</li> <li>3. Check motor load. Resize the motor or drive if necessary.</li> </ol>                 |
| Motor pulsates or surges under load    | <ol style="list-style-type: none"> <li>1. Motor “bouncing” in and out of torque limit.</li> </ol>                                                                                                 | <ol style="list-style-type: none"> <li>1. Make sure motor is not undersized for load; adjust TQ LIM setting CW (page 34).</li> </ol>                                                                                                                          |
| Motor does not reverse                 | <ol style="list-style-type: none"> <li>1. Defective DIRECTION switch connection.</li> <li>2. Reversing circuit not working properly.</li> <li>3. Motor not wired correctly for reverse</li> </ol> | <ol style="list-style-type: none"> <li>1. Check DIRECTION switch connection.</li> <li>2. Check reversing circuit by shorting TB501 (D) terminal to (E1) terminal with jumper wire.</li> <li>3. Check motor wiring Review motor connections section</li> </ol> |

| Problem                              | Possible Cause                                                                                                                                                                                                                                                            | Suggested Solution                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TQ is unsatisfactory at high speeds. | <ol style="list-style-type: none"><li data-bbox="408 278 688 303">1. TQ LIMIT set too low.</li><li data-bbox="408 371 688 429">2. Load may exceed rating of motor/drive.</li><li data-bbox="408 653 688 738">3. Nominal input voltage may be too low for motor.</li></ol> | <ol style="list-style-type: none"><li data-bbox="722 278 948 336">1. Check TQ LIM setting (page 34).</li><li data-bbox="722 371 964 614">2. "Fix" load (i.e., straighten mounting, coupling, etc.); or replace motor and drive with motor and drive rated for higher horsepower.</li><li data-bbox="722 653 964 769">3. Compare motor voltage to input voltage. Replace motor if necessary.</li></ol> |

---

## Optional Capacitor Kit (175325.00)

In some applications, lowering carrier frequency reduces switching losses and increases bearing life in some motors. LEESON provides an optional capacitor kit for lowering the carrier frequency.


The default carrier frequency on FHP Series controls is 16kHz. Using one of the capacitors supplied in the kit, the carrier frequency can be lowered to a range of 12kHz to 4kHz. Note: Audible noise will increase when the carrier frequency is lowered.

To lower the carrier frequency on all FHP Series controls, install one of the following 2-pin capacitors on the board:

| LABEL ON CAPACITOR | FREQUENCY | VALUE    |
|--------------------|-----------|----------|
| 3n3J               | 12kHz     | 0.0033uF |
| 6n8                | 10kHz     | 0.0068uF |
| 10n                | 8kHz      | 0.01uF   |
| 33n                | 4kHz      | 0.033uF  |

See Figure 22 for Capacitor locations and installation instructions

Insert the 2-pins of the carrier frequency capacitor into the 2 socket holes (C503) located on board.

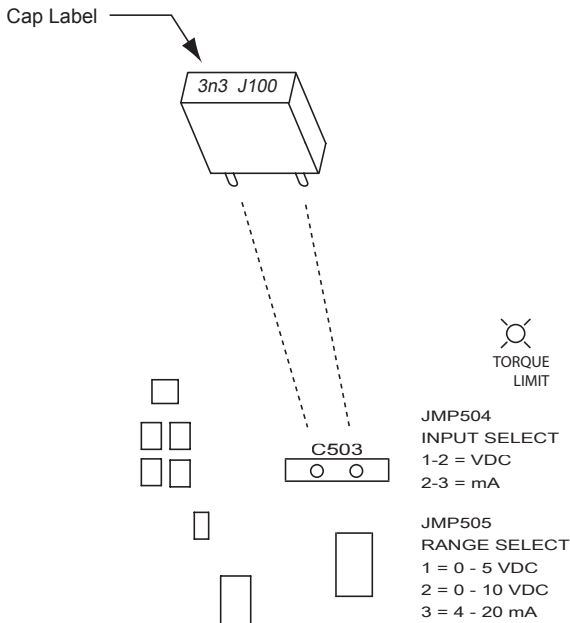

**Figure 22. 175325.00 Carrier frequency capacitor location**

---

## Replacement Parts

Table 2 is provided as a guide for some component parts that may require replacement. These items are not available from LEESON. They are readily available from suppliers of electrical components. Replacing these items on drives that are under warranty will void the warranty.

---

Table 2. Replacement Parts

---

### Potentiometer Components

10K ohm, 5W Potentiometer

3/8-32 x 1/2 Nut

3/8IN Int. Tooth Lockwasher

Pot Insulating Washer

Non-Insulated Female Connector

3 ea insulated Female Connector

---

## NOTES

# NOTES

---

## NOTES



## LIMITED WARRANTY

A. Warranty - LEESON Electric warrants that its products will be free from defects in material and workmanship for a period of one (1) year from the date of shipment thereof. Within the warranty period, LEESON will repair or replace such products that are returned to LEESON or to the nearest Branch Office, with shipping charges prepaid. At our option, all return shipments are F.O.B. LEESON or its Branch Office. This warranty shall not apply to any product that has been subject to misuse, negligence, or accident; or misapplied; or repaired by unauthorized persons; or improperly installed. LEESON is not responsible for removal, installation, or any other incidental expenses incurred in shipping the product to or from the repair point.

This warranty applies only to standard catalog products and does not apply to specials. Any returns for special controls will be evaluated on a case-by-case basis. LEESON is not responsible for removal, installation, or any other incidental expenses incurred in shipping the product to and from the repair point.

B. Disclaimer - The provisions of Paragraph A are LEESON's sole obligation and exclude all other warranties of MERCHANTABILITY or use, express or implied. LEESON further disclaims any responsibility whatsoever to the customer or any other persons for injury to person or damage or loss of property of value caused by any product that has been subject to misuse, negligence, or accident, or misapplied or modified by unauthorized persons or improperly installed

C. Limitations of Liability - In the event of any claim or breach of any of LEESON's obligations, whether expressed or implied, and particularly of any claim of a breach of warranty claimed in Paragraph A, or of any other warranties, express, or implied, or claim of liability that might, despite Paragraph B, be decided against us by any lawful authority, LEESON shall under no circumstances be liable for any consequential damages, losses, or expense arising in connection with the use of, or inability to use, LEESON's product for any purpose whatsoever. An adjustment made to the warranty does not void the warranty, nor does it imply an extension of the original one (1) year warranty period. Product serviced and/or parts replaced by a no-charge basis during the warranty period carry the unexpired portion of the original warranty only.

## LIMITED WARRANTY continued

If for any reason any of the forgoing provisions shall be ineffective, LEESON's liability for damages arising out of its manufacture or sale of equipment, or use thereof, whether such liability is based on warranty, contract, negligence, strict liability in tort, or otherwise, shall not in any event exceed the full purchase of such equipment.

Any action against LEESON based upon any liability or obligation arising hereunder or under any law applicable to the sale of equipment or the use thereof must be commenced within one year after the cause of such action arises.

## DISCLAIMER

The information and technical data in this manual are subject to change without notice. LEESON Electric makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. LEESON Electric assumes no responsibility for any errors that may appear in this manual and makes no commitment to update or to keep current the information in this manual.



LEESON Electric  
2100 Washington Street  
Grafton, WI 53024-0241, U.S.A.  
Phone: (262) 377-8810  
FAX: (262) 377-9025  
Document number 250-0383, Revision 2  
Printed in the U.S.A – April 2007